How to Measure

DIY Custom Patio Sliding Door Screen

RITESCREEN

Scan for easy 3D instructions

Tap. Zoom. Rotate with official interactive instructions on the BILT app.

BILT.®

Download on the App Store

GET IT ON Google Play

Do not measure your existing door screen. Please take new measurements from our measuring guide.

For Measuring Width:

1) Insert your tape measure into the side of the channel and measure over to where the glass begins on the stationary door.

2) Subtract **1/2"**.
If you're satisfied with your current door's width, order this width.

Identify Your Track Type

Upstand: Small ridge of metal or plastic on the center of the bottom track with the upper track flat and smooth

Downstand: Small ridge of metal or plastic on the center of the upper track with the bottom track flat and smooth

Upstand & Downstand *(Double Stand)*: Small ridge of metal or plastic on the center of the bottom and upper tracks

NO Upstand or Downstand: No ridge of metal or plastic on the center of the bottom or upper tracks

How To Measure Your Track Type

RITESCREEN

Measuring Height of an Upstand:

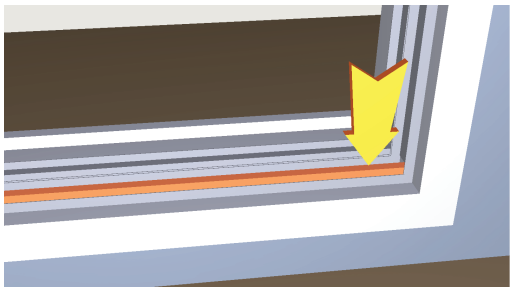

1) Measure from the top of the metal or plastic ridge to the flattest part of the upper inside track.
2) Measure the depth of the upper track.
3) Take the depth measurement from the upper track and **divide it in half.**
4) Use the depth measurement and subtract it from the overall measurement you took in Step 1. *This is the Height to order.*

Example: If the measurement from the bottom track to upper track is **71 1/2"** and the upper track is **3/4"** deep you will order **71 1/8"**.

Measuring Height of a Downstand:

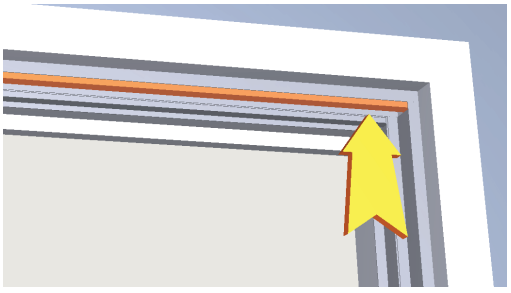

1) Measure from the small ridge of metal or plastic on the center of the upper track to the flattest part of the bottom track.
2) Measure the depth of the bottom track.
3) Take the depth measurement from the bottom track and **divide it in half.**
4) Use the depth measurement and subtract it from the overall measurement you took in Step 1. *This is the Height to order.*

Example: If the measurement from the upper track to bottom track is **71 1/2"** and the bottom track is **3/4"** deep you will order **71 1/8"**.

How To Measure Your Track Type

RITESCREEN

Measuring Height of an Upstand & Downstand *(Double Stand)*:

1) Measure from the top of the metal or plastic ridge on the upper track to the metal or plastic ridge on the bottom track.

2) Subtract **3/8"** from the measurement.
This is the Height to order.

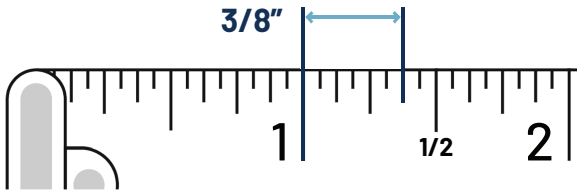

Example: If you measure **71 1/2**" from the bottom track to the upper track, you will order **71 1/8"**.

Measuring Height with **NO** Upstand or Downstand:

1) Measure from the outer leg of the bottom track channel (not inside the track) to the flat part of the upper track.

2) Subtract **5/16"** off the overall measurement.
This is the Height to order.

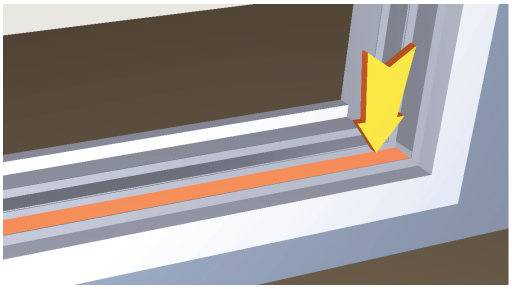

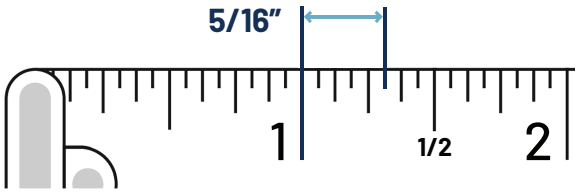

Example: If you measure **71 1/2**" from the bottom track to the upper track, you will order **71 3/16"**.